


NOTE: The electric solenoid remote control requires an electrical impulse to activate or release the Booster-Pac clamp control valve. The Booster-Pac will not lose clamping pressure in the event electrical power is lost. If electric power is lost while in the clamp position, pressure can be released manually.

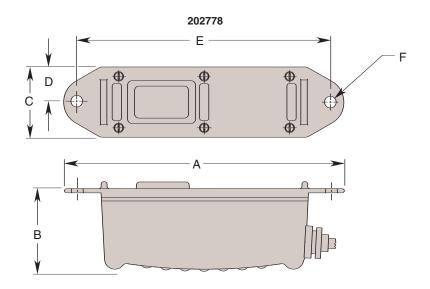

Cat. No.	Dimension (In Inches)					
	А	В	С	D	E	F Dia.
202778	7.630	2.460	1.930	.965	6.880	.315